

## DOSEEM DSBA6.8P Self-contained Breathing Apparatus (SCBA)

DOSEEM self-contained breathing apparatus (SCBA) is widely used in fire control, chemical, ship, oil, smelting, electric power, warehouse, laboratory, mine and other key departments for fire fighting, fire, gas, steam, and oxygen. It is a safe and effective for fire extinguishing and rescue. An ideal personal breathing protection device.



### Optimized design, easy to use

DOSEEM DSBA6.8P SCBA is one of the lightest breathing apparatus in the world. Innovatively developed an ergonomic backsheet with outstanding resistance to heat radiation, abrasion, tear and chemical resistance. Even in the harsh environment, DSBA6.8P respirator is very comfortable to wear and stable. DSBA6.8P passed the EN137 1000°C high temperature flame test, which has excellent anti-wear and anti-heat radiation characteristics.

### Enhanced backpack system

DSBA6.8P integrates a strap that can be precisely attached to the backplate. Advanced extruded waterproof EVA harness material is protected by a CR rubber edge seal that resists tearing and wear. The wear-resistant and flame-retardant FR-TPE belt ensures a tight fit on the user's body even during large movements. The refined stainless steel metal lock makes the DSBA6.8P quality more convenient and easy to use.

### Pipeline integration, safe & reliable

In order to reduce the danger of being hooked and avoid physical damage, pressure tube and the air supply tube are integrated in the backplane clamp of DOSEEM DSBA6.8P backboard, which not only prevents thermal radiation impact, but also greatly enhances the safety of the enclosed space environment entering and working.

### Easy maintenance

During service and maintenance, in order to minimize downtime and minimize costs, DSBA6.8P incorporates a number of unique designs, all of which can be easily removed or reconnected from the backplane using simple tools. The strap is attached to the backing plate by a single adjustment of the innovative design. The snap connection of the primary pressure relief valve allows the pneumatic section to be quickly installed or removed from the respirator. The tubing can be quickly removed and cleaned from the backing plate.



Article number: 01101

SCBA comprises a face mask, an air cylinder and valve, a demand valve, a pressure reducing valve, a high pressure pipe, a medium pressure pipe, a backplate, a warning whistle and a pressure gauge.




Full face mask DSM-1

02001



01101

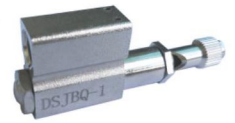

Alarm whistle DSJBQ-1

02076



Mechanical pressure gauge DSJYB-1

02071



Self-locking cylinder valve KHF-30

02181



Demand Valve DSG-1

02031



6.8L Air cylinder

02081



Backplate DSB-1

02041



Pressure reducer unit


02231

**DSBA6.8P TECHNICAL DATAS**

Model	DSBA6.8P (01101)	Suction resistance	≤500Pa
Standard	GB/16556-2007	Expiratory resistance (25 times/min)	≤700Pa
Fulfill the standard	EN 137:2006	Expiratory resistance (40 times/min)	≤1000Pa
Capacity	6.8L	Operating temperature	-30~60℃
Storage capacity	2040L	The whole weight	11.0kg
Maximum air flow	≥1000L/min	Alarm intensity	≥90db
Working pressure	≤30MPa	Light work usage time	70min
Alarm pressure	5.5±0.5MPa	Moderate work usage time	45min
Static pressure in a mask cavity	≤500Pa	Heavy work usage time	30min

**PACKING PARAMETERS**

Inner packaging	Material: PC/ABS	Size: 70cm * 29cm * 43cm
Outer packing	Material: moisture-proof carton	Size: 71cm * 30cm * 44cm

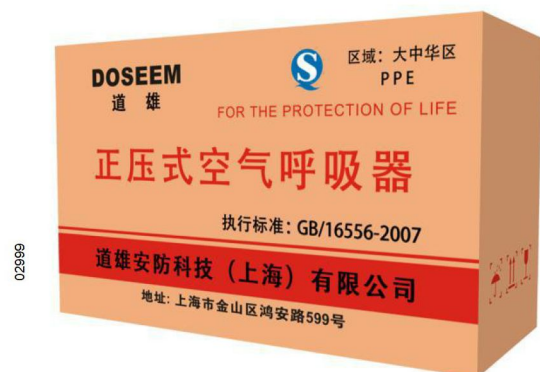

## MAINTENANCE

After each use of a SCBA it is necessary to ensure that it is stowed in a condition whereby it is ready again for immediate use. Follow the detailed instructions given by the manufacturer; they will generally include the following:

- Clean the set thoroughly;
- The full face mask should be cleaned with mild neutral detergent and disinfectant lotion, then thoroughly rinsed with clean water and dried naturally. Do not soak the mask in alcohol disinfectants for a long period of time and do not use steam for disinfection. Check that the fastenings are in good order;
- The surface of the components such as backplate, cylinder valve, pressure reducer, high pressure gauge, alarm and so on can be cleaned without plush soft cloth or gauze;
- Inspect the complete set for damage and any loose fittings;
- After use, the gas cylinder is wiped clean with soft cloth, and labelled it is the identification of empty bottle, so that it can be inflated in time. Fit a fully charged cylinder;
- Complete high pressure and low pressure tests disinfect the facemask;
- Re-stow the equipment in a ready-to-use condition and complete all use and test records;
- The maintenance of SCBA in full dry after the correct position into the packing box, stored in the air fresh, away from the heat source, without direct sunlight in the environment. It is forbidden to store in damp environment for a long time to prevent mildew.
- All equipment must be inspected at regular intervals, the inspection cycle is not more than one month, and always after use in practice or in an emergency. It should never be stowed when wet or dirty.

### Manufacturer

Tel: +86-21-67329826

E-mail: [info@doseem.com](mailto:info@doseem.com)

Web: <https://www.doseem.com>

Add: No.599 Hong'an Rd, Jinshan, Shanghai



Wechat official



Official website